

rubber accessories



Manufacturer

Roppe Corporation 1602 N. Union Street P.O. Box 1158 Fostoria, Ohio USA 44830-1158 Website - www.roppe.com

t: (419) 435.8546 tf: (800) 537.9527

f: (419) 435.1056

e-mail: sales@roppe.com

Product Description


Roppe offers a complete line of finishing accessories that complement our broad product mix, while exceeding design expectations in the profiles and shapes that are important in design today. All accessories meet ADA requirements for changes in level to appearance between different floor materials.

Features

Non-Porous **PVC Free** Extremely Durable **ADA Compliant**

#75 Rolling Traffic Transition, 3/8" to 1/4"

Transitions 3/8" to 1/4" materials Installation Radius: 12 ft. 10 9-ft. sections per carton (90 ft.)

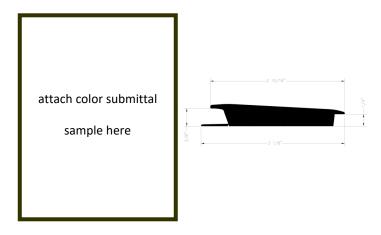

Technical Data

ASTM E84 - Surface Burning: Class B

ASTM E648 (NFPA 253) - Critical Radiant Flux: Class I,

 $> .045 \text{ W/cm}^2$

ASTM E662 (NFPA 258) - Smoke Density Passes, <450

Acclimation Time: 48 hours

Storage & Acclimation Temperature: 65 ° - 85 ° F

Adhesive* (Visit our website for complete Adhesive instructions)

EN-610 Epoxy Nose Filler

Unit Size: 13.5 oz. Cartridge

VOC: < 12 q/l

1/2" bead coverage rate: 25 lin. ft. per cartridge 1/4" bead coverage rate: 50 lin. ft. per cartridge

Substrate: Porous and Non-Porous

C-630 Contact Adhesive

Unit Size: 1 Quart VOC: 0.0 g/l

20 - 40 sq. ft. per unit 120 - 140 lin. ft. per unit

Substrate: Porous and Non-Porous

Installation* (Visit our website for complete Installation instructions)

Rubber Accessories are designed for interior use only with temperatures maintained from 65°F (19°C) and 85°F (30°C). The flooring installer must inspect all material for manufacturing imperfections and irregularities prior to installation. Before installing, confirm accessory placement and the placement of adjoining material per design specifications.

Maintenance* (Visit our website for complete Maintenance instructions)

Ensure that adhesive has cured for the recommended period of time prior to maintenance. Sweep, dust, mop, vacuum or wipe material to remove any dirt, dust or debris. Mix 2-4 ounces of our recommended cleaner per gallon of clean, potable water. Use a clean mop, towel or cloth to apply cleaner to material. If necessary, scrub material while wet using a 22 gauge soft bristled scrubbing brush. Use an auto-scrubber, wet vacuum, clean mop or clean towel to remove any and all excess cleaning solution. Rinse area with clean, cool water and allow material to dry entirely.

Availability, Cost & Samples

Roppe Flooring products are sold through distribution. To locate the nearest distributor, visit www.roppe.com. or send an email to solutions@roppe.com

Technical Document Support

Additional product resources and technical documents are available online at www.roppe.com. For additional technical support, send an e-mail to solutions@roppe. com

Warranty

Roppe Provides a 1 year Limited Warranty on all Rubber Accessories. For additional information, see associated Warranty documents.

*For complete adhesive, installation & maintenance instructions, visit www.roppe.com